

# FirePro® Flex Seal Linear Joint



## Tools required

- Sharp insulation knife or insulation saw
- Paint brush
- Sealant gun
- Tape measure /rule

## Ancillary products

- FirePro® Flex Seal Coating
- FirePro® HES
- FirePro® AIS

## Fixing and application

1. Measure the width of the FirePro Flex Seal Linear Joint to be sealed.
2. Cut the FirePro Flex Seal Coated Strips 25% bigger than the joint width, so when installed they are under compression.
3. Ensure substrate is clean and free of dust and debris.
4. Install the FirePro Flex Seal Linear Joint with the coating on the top surface.
5. Apply FirePro Flex Seal Coating to the face of all joints between the seal and the substrate, overlapping by 20mm.
6. Apply FirePro Flex Seal Coating to the faces of all butt joints between pieces of FirePro Flex Seal Linear Joint.
7. Once installed, apply a second coating of FirePro Flex Seal Coating to the to surface of the FirePro Flex Seal Linear Joint.

## Health & safety

The mechanical effect of fibres in contact with skin may cause temporary itching.



Cover exposed skin  
When working in unventilated area wear disposable face mask.



Clean area using vacuum equipment.



Waste should be disposed of according to local regulations.



Rinse in cold water before washing.



Ventilate working area if possible.



Wear goggles when working overhead.

## Disclaimers

ROCKWOOL Limited, its affiliates, its agents and employees and all persons acting on its or their behalf (collectively "ROCKWOOL"), disclaim any and all liability for any errors, inaccuracies or incompleteness contained in any installation guidance or in any other disclosure relating to any product.

Usage of the information remains under the sole responsibility of the purchaser and/or user.

ROCKWOOL makes no warranty, representation or guarantee regarding the information contained in the installation guidance, the suitability of the products for any particular purposes or the continuing production of any product. To the maximum extent permitted by applicable law, ROCKWOOL disclaims (i) any and all liability arising out of the application, use of any product, misuse or inability to use the product (ii) any and all liability, including without limitation special, consequential or incidental damages, and (iii) any and all implied warranties, including warranties of fitness for particular purpose, non-infringement and merchantability.

Information contained in this document is up-to-date as at the date of issue. As ROCKWOOL Limited cannot control or anticipate the conditions under which this product may be used, each user should review the information in specific context of the planned use. To the maximum extent permitted by law, ROCKWOOL Limited will not be responsible for damages of any nature resulting from the use or reliance upon the information contained in this data sheet. No express or implied warranties are given other than those implied by law.